

Fiber-TV

Instructional Manual

Fiber-TV powered by
Celect Communications


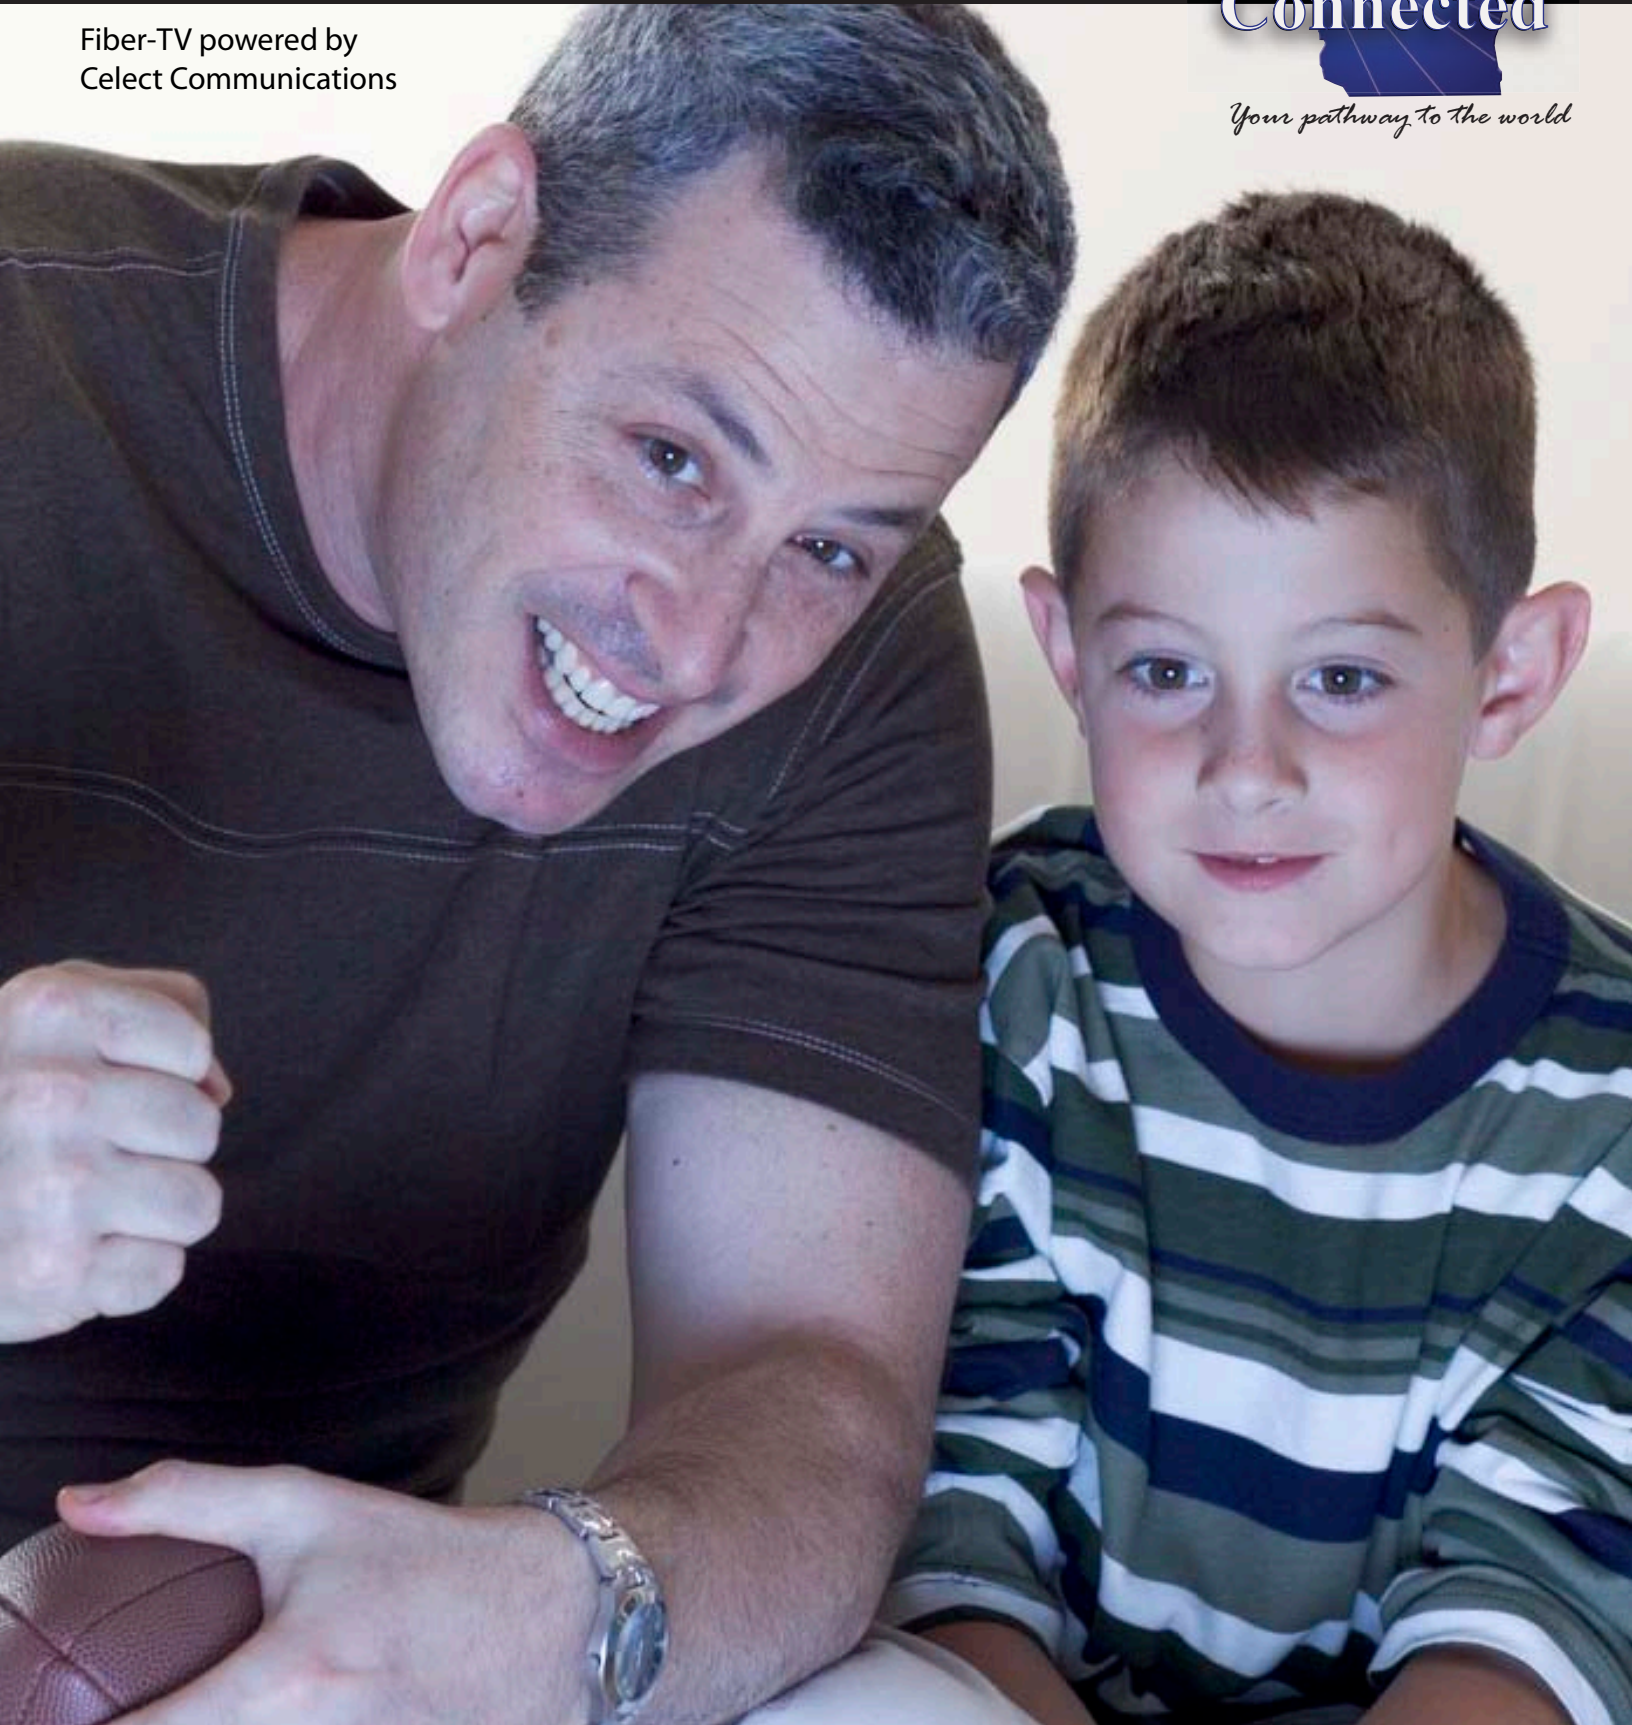


Table of Contents

REMOTE CONTROL GUIDE	1
Amino Remote Control Overview	1
Programming your Amino Remote Control	2
ADB Remote Control Overview	3
Programming your ADB Remote Control	4
Powering Devices	4
Adjusting Volume	5
Frequently Used Commands	5
Changing Channels	5
Finding Programming	6
Blocking Channels (For added protection)	6
USING MENU	7
Using the Menu Button	7
Using the Guide Option	8
Using the DVR Option	8
Using the My Library Option	9
Using the Settings Option	10
Using the Favorites Option	10
Using the Search Option	10
Using the Sign In/Out Option	11
SETTING UP PARENTAL CONTROLS (For added protection)	11
Establishing New Password & PIN	11
Setting Up Parental Controls	12
Unlocking/Reactivating Parental Controls	13
Creating Users	13
Signing Users In	14
Editing Users Settings	14
SETTING UP FAVORITES	15
Create Favorites Folders	15
TV & MOVIE RATINGS GUIDE	17
TV Parental Guidelines Ratings	17
Movie Picture Association of America Ratings	18

PURCHASING EVENTS	19
Purchasing PPV (Pay per View) Events	19
Canceling PPV (Pay per View) Events	20
Viewing a history of PPV (Pay per View) Events	20
USING ADVANCED FEATURES	21
Using the Reminders & Autotune Features	21
Viewing a History of Reminders	22
Enabling/Disabling Caller ID	22
Viewing a History of Incoming Calls	22
USING WHOLE-HOME DVR	23
Whole-Home DVR	23
Controlling LIVE Programs	23
Recording Programs	23
Viewing a Recorded Program	26
Scheduling an Event from Home	27
Scheduling an Event Away from Home	27
WatchTVEverywhere	28
SET TOP BOX GUIDE	29
ADB 2500 Set Top Box	29
ADB 3800 Set Top Box	31
ADB 5810 Set Top Box	33
ADB 5721 Set Top Box	35
Amino A140 Set Top Box	37
Amino A540 Set Top Box	38
TROUBLESHOOTING GUIDE	39

Amino Remote Control Guide

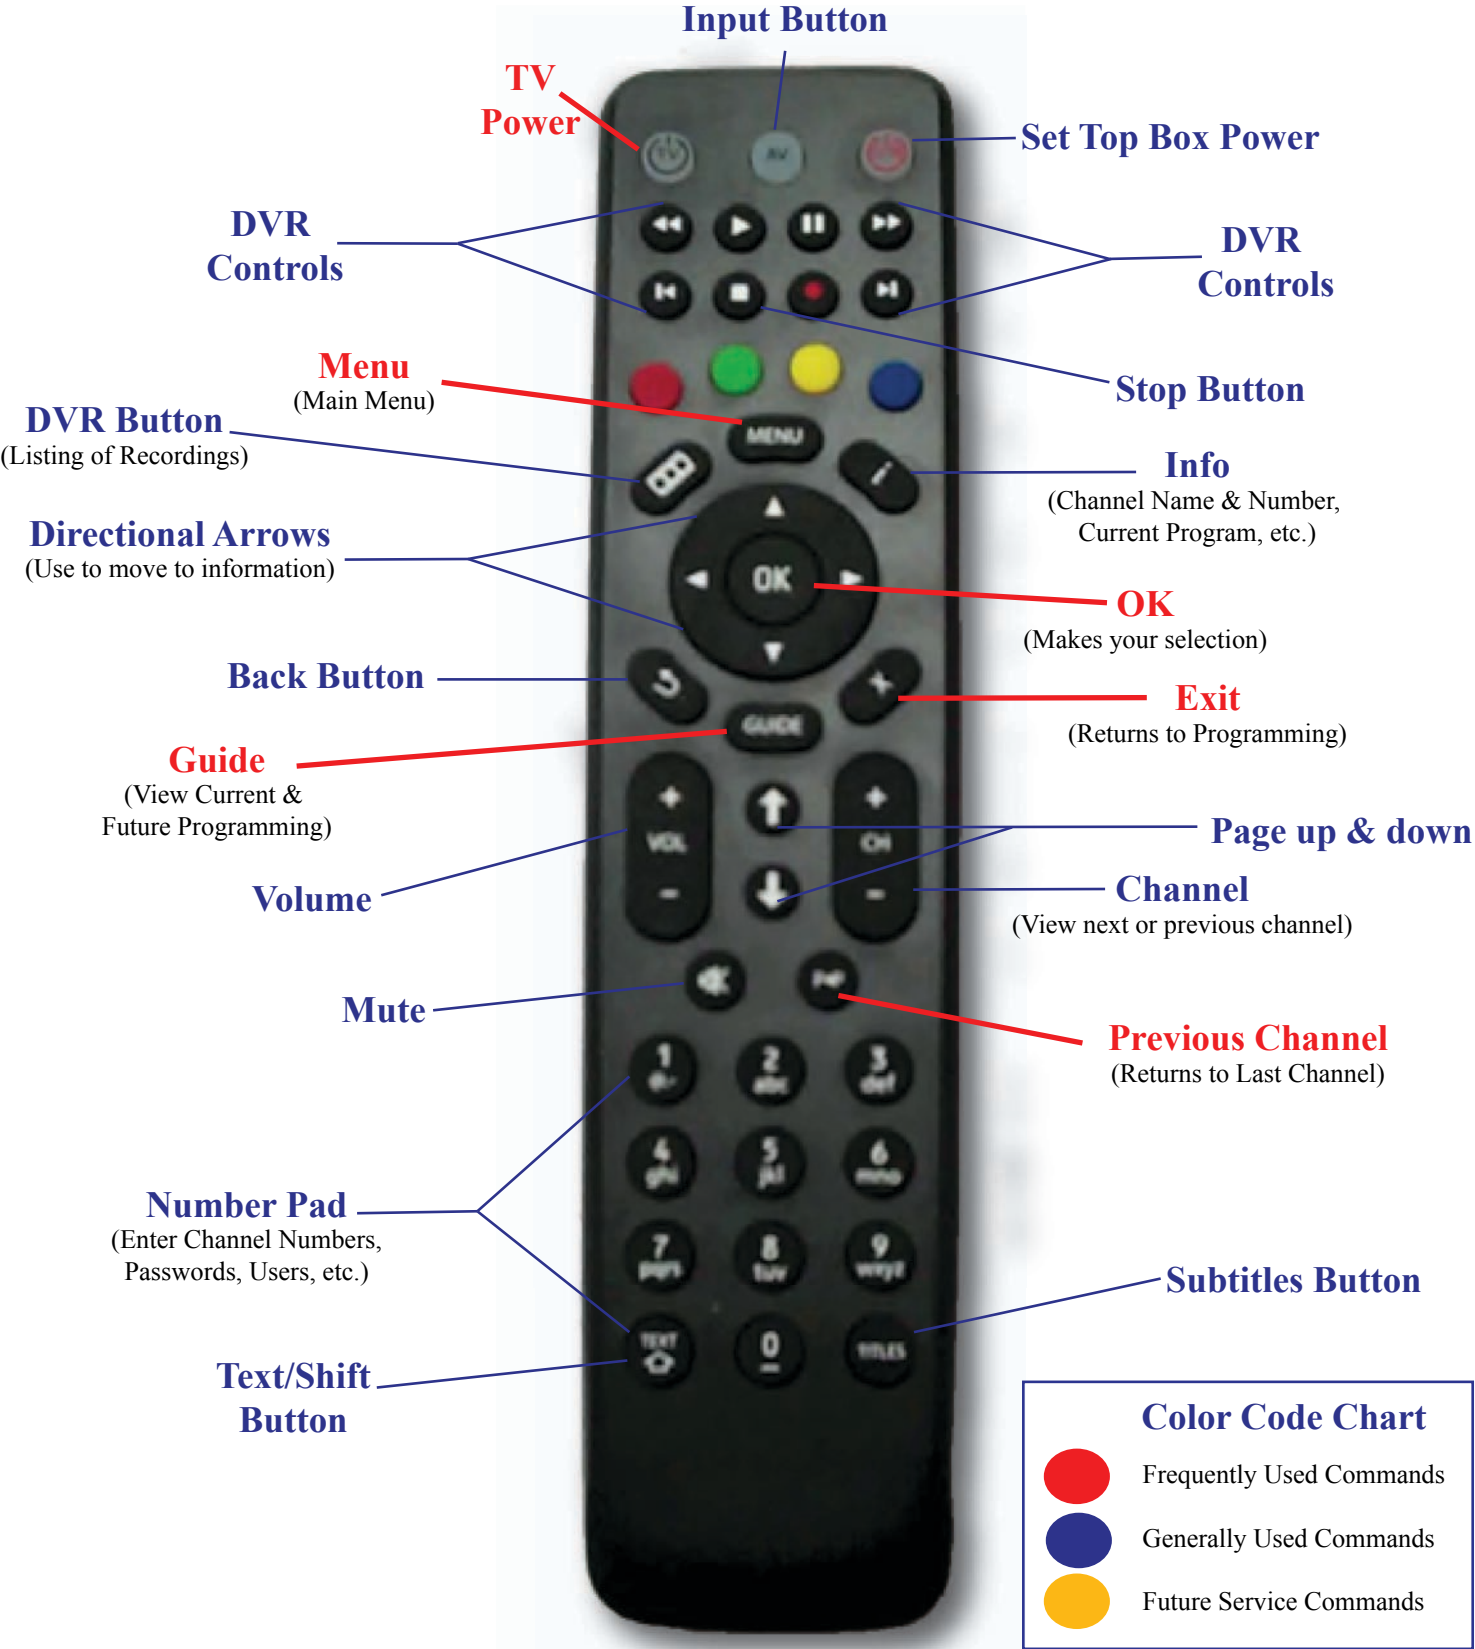

Setting up your Remote Control

Before you can use your Remote Control for your TV, you will need to insert a programmable code into the Remote by doing either the Brand or Auto Search.

Brand Search Set-Up

Use the following steps to program your TV into your Remote Control.

1. Determine the manufacturer of your TV set.
2. Look up the 4-digit manufacturer code located in the Amino Remote Control Guide.
3. Make sure your TV set is turned on.
4. Press and hold the 1 and 3 buttons at the same time on the Remote Control for approximately 3 seconds until the TV button remains lit, then release both buttons.
5. Enter the 4-digit manufacturer code for your TV set. On each digit entry the TV button will flash. On entry of the 4th digit the TV button will flash then remain lit.
6. Point the remote control at the TV and press and hold down the TV button on the Remote Control.
7. When the TV turns off, release the button. This may take a few minutes to happen.
8. Press and hold the Text/Shift button and then at the same time the Stop button to finish setting up the TV control mode.
9. The TV button will go out and now your TV is programmed into the Remote Control. To verify, simply press the TV button to turn your TV on and off.

Device Code:

TV: _____

Auto Search Set-Up

Use the following steps to program your TV into your Remote Control.


1. Make sure your TV set is turned on.
2. Press and hold the 1 and 3 buttons at the same time on the Remote Control for approximately 3 seconds until the TV button remains lit, then release both buttons.
3. Point the remote control at the TV and press and hold down the Mute button on the Remote Control.
4. When the TV turns off, release the button. This may take a up to 5 minutes to happen.
8. Press and hold the Text/Shift button and then at the same time the Stop button to finish setting up the TV control mode.
9. The TV button will go out and now your TV is programmed into the Remote Control. To verify, simply press the TV button to turn your TV on and off.

Removing TV settings from your Remote Control

If you would like to program a new TV into the Remote Control, you first need to remove the old TV settings. Use the following steps to remove your TV into your Remote Control.

1. Press and hold the 1 and 6 buttons simultaneously for approximately 3 seconds until the TV button is lit.
2. Enter the following key sequence in the correct order 9 9 6.
3. The TV settings will be deleted from the Remote Control.

ADB Remote Control Guide

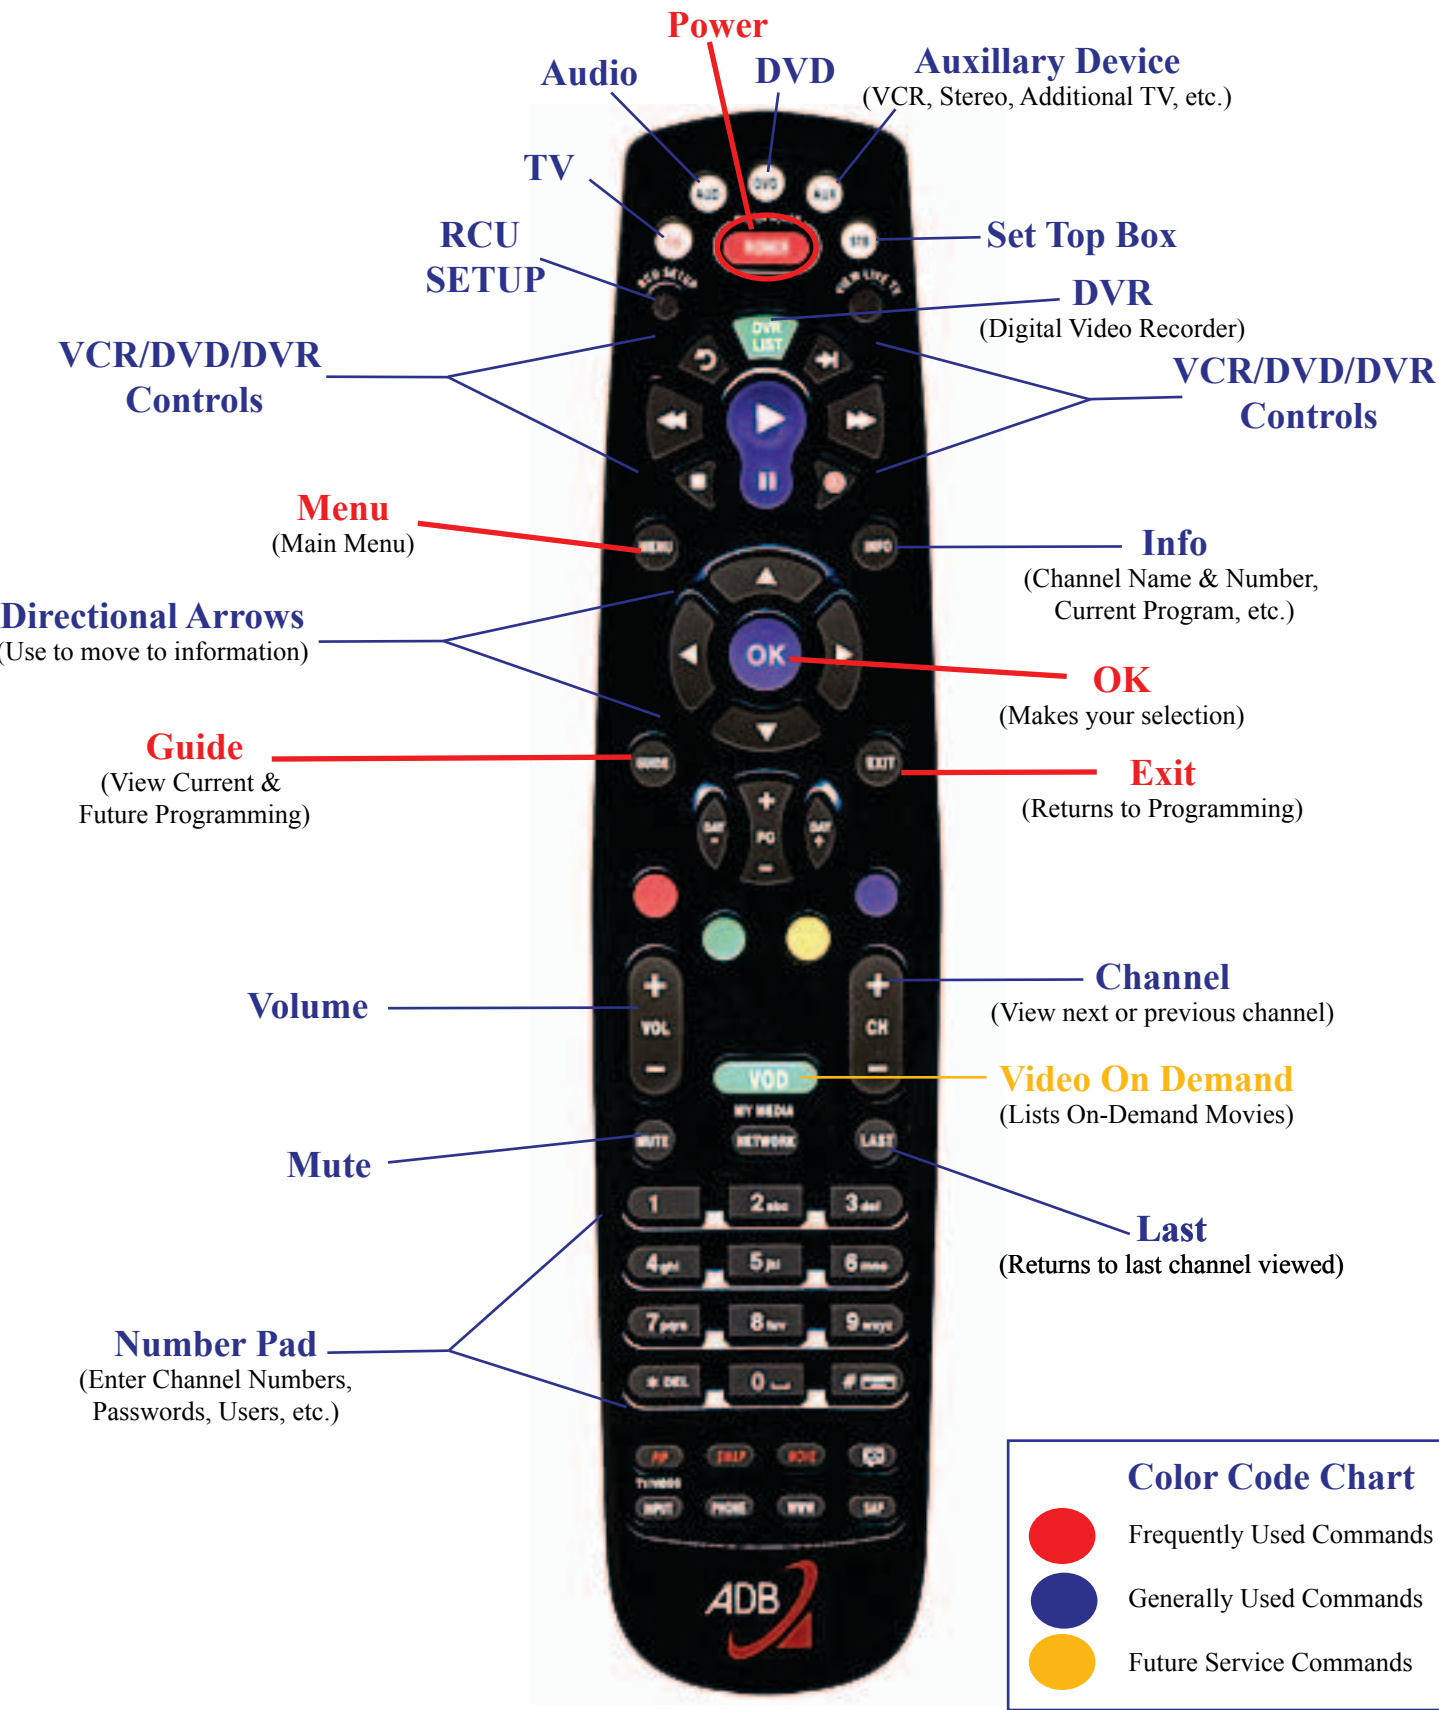

Setting up your Remote Control

Before you can use your Remote Control for additional functions such as your TV or DVD Player, you will need to insert a programmable code into the Remote by doing either the Quick Search or a Manual Entry. These codes are located in the Remote Control User's Guide that was included in the packaging of the Remote Control and are listed by brand and model of your device.

Quick Search Set-Up

Use the following steps to program your TV into your Remote Control.

1. Turn on your TV.
2. Press the TV button once.
3. Press the RCU SETUP button until the TV button blinks twice.
4. Enter 991 by using the Number Pad. (The TV button should flash two times. If the TV button emits one long flash, repeat steps 2 through 4.)
5. Press and release the CH + button continuously until your TV turns off.
6. Then press the RCU Setup button once to lock in the code.
7. To make sure your device has been programmed correctly, point the Remote Control at your TV and press the POWER button to turn on.
8. Try your volume button, channel up and down button and STB Button to make sure your guide comes up. If these all work, you are set.

Manual Set-Up

Use the following steps to program your Remote Control.

1. Turn on the device that you wish to program into the Remote Control.
2. Find the 4-digit code found in the Remote Control User's Guide.
3. Press the button (TV, AUD, DVD, AUX, or STB) on the Remote Control
4. Press the RCU SETUP button until the device button blinks twice.
5. Enter the 4-digit code by using the Number Pad (The selected button should flash two times. If the selected button emits one long flash, repeat steps 2 through 6.)
6. To make sure your device has been programmed correctly, point the Remote Control at your device and press the POWER button once.
7. Once you have successfully programmed your device, note the code below for future reference.

Device Codes:

TV: _____ DVD: _____ AUX: _____

8. Repeat process to program another device.

Powering Devices

1. Is your device programmed into your Remote Control? (If so, continue to step 2. If not, refer to the above steps in Programming your Remote Control.)
2. Press the button of your selected device (TV, AUD, DVD, AUX, or STB)
3. Press the Power button
4. Your device should now be on
5. Every button that is pressed on the Remote Control will now control your selected device until another device is activated

Additional Info: Multiple devices can be powered at the same time using the same Remote Control.

If the STB is selected and the power button is pushed both the TV & the Set Top Box will power down, if the TV is programmed into your Remote Control.

Remote Control Guide

Adjusting Volume

In order to adjust the volume using your Remote Control, you will need to first program your TV into the Remote. If you have not done so already, refer to Programming your Remote Control above. Once it is programmed you can:

1. Press the Volume + or - button to adjust the sound
2. Press Mute to turn the sound off, pressing Mute again will turn the sound back on

Frequently Used Commands

There are a number of controls that you will use on a daily basis. Below is a brief description of what they are used for:

MENU: The Menu button allows you to access all of the features that are available to you such as Parental Controls.

OK: The OK button allows you to make selections including activating channels and options.

GUIDE: The Guide button allows you to view current and future programs in a time-line based display. (For more information on the Using the Guide Option see page 6)

INFO: The Info button shows you basic information about current and future programs including Channel Name and Number, a brief description of the program, ratings, start and end times and date.

EXIT: The Exit button will always return you to programming. This button can be pressed at anytime, in any function.

Changing Channels


There are a number of different ways to change the channel you are currently viewing.

1. Using the Channel button, press the + or - to view the next or previously numbered channel.
2. Using the Number Pad, simply press the numbers of your desired channel. You will see the numbers entered displayed in the upper right hand corner of your screen, within seconds the channel will change.
3. Using the Directional Arrows, press the up and down arrows to view channel info and press OK to select channel.
4. Using the Last button will take you to the last channel viewed.

Finding Programming

Using the Guide and Info buttons will allow you to find information on current and future programming.

Using the Guide button




1. Press the Guide button on your Remote Control.
2. On the left hand side of the screen, under the live picture, you will see  with the text ALL next to it. This option will show you ALL the channels, both those you are subscribed to and those that you are not. You can change the tab to view different tabs such as:
 - a. Subscribed (which will only show the channels you have access to)
 - b. SD (Standard Definition)
 - c. HD (High-Definition)(if applicable)
 - c. Favorites (if applicable) (To set up Favorites see page 13)
3. To change the tabs, simply press the Guide button until you find the listing you would like to view
4. Once you have the desired tab view set, using the Directional Arrows, press the up, down, left, and right arrows to view channel and program info. Tip: To scroll by page, use the Channel + or - button.
5. If you find a program that you would like to view, press OK to select the channel.
6. If you do not find a program, pressing the Exit button will return you to current programming.

Using the Info button

1. To make the Info bar appear, simply press the Info button or press the up, down, left and right Directional Arrows. This will provide you with channel and program information. To view extended program information including the director and the actors, press the Info button again.
2. If you find a program that you would like to view, press OK to select the channel.
3. If you do not find a program, the Info bar will automatically disappear after a few seconds of inactivity or you can press the Exit button.

Blocking Channels (For added protection)

If there is a Channel that you do not want to be viewed, instead of activating the Parental Controls, you can block it from the listings using the following steps:

1. Press the Menu button on your Remote Control
2. Using the Directional Arrows, highlight Settings  and press OK
3. Using the Number Pad enter your password and press OK
4. Using the Directional Arrows place a checkmark in the box next to Channel Blocking
5. After checking the box, a box will appear with the text, "Save Changes?" Yes, will be highlighted, press OK
6. A box will appear with the text "Settings Successfully Updated", press OK
7. Highlight Edit and press OK
8. Using the Directional Arrows highlight the Channel you would like to block and press OK
9. You will now see a  sign next to the Channel
10. If you selected the wrong Channel, pressing OK will remove the  sign
11. Once you have the channels you want to block, press the left directional arrows to get out of the channel listing
12. Using the Directional Arrows, highlight Update and press OK
13. Pressing the Exit button will return you to programming

Using Menu

Using the Menu Button

The Menu is an easy way to access any features you may have. Pressing the Menu button will provide you the following options:

1. Settings
2. Favorites
3. Search
4. Sign In/Out (If Login Required)
5. Guide
6. DVR
7. My Library
8. Control On/Off (Parental Controls)

Selecting Settings

The Settings option allows you to create/edit preferences and create/edit users. (See Using the Settings Option on page 10)

Selecting Favorites

The Favorites option allows you to view and edit current channels listed under each Favorites folder that have been created. (See Setting up Favorites on page 15)

Selecting Search

The Search option allows you to enter keywords and retrieve any programs that may include that keyword. (See Using the Search Option on page 10)

Selecting Sign In/Out

The Sign In/Out option allows you to log Users in and out. (See Setting up Parental Controls on page 11)

Selecting Guide

The Guide option allows you to view program listings of what's on now and what will be on in the future. (See Using the Guide Option on page 8)

Selecting DVR

The DVR option allows you to record programs on your Set Top Box to view at a later time as well as pausing, fast forwarding, playing, or rewinding current programs. (See Using the DVR Option on page 8)

Selecting My Library


The My Library option provides you with a history of Videos, PPV Events, Pay per Block, Sports Packages, Reminders, Messages, and Caller ID. (See Using the My Library Option on page 9)

Selecting Control On/Off

The Control option allows you to turn your Parental Controls on and off. (See Setting up Parental Controls on page 11)


Using the Guide Option

The Guide option allows you to view information on current and future programming including Channel Name & Number, a brief description of the program, rating, start and end times, and date. To access the Guide feature you can:

1. Simply press the Guide button **OR** press the Menu button on your Remote Control.
2. If pressing Menu, highlight Guide or  and press OK.
3. The program listing will default to show the text ALL in the tab above the Channel info, which will list all of the programs whether you are subscribed to them or not. You have the ability to change the tab to a different view by pressing Guide. Each time you press the Guide button the text in the tab should change. Some examples may be: Subscribed & Favorites1
4. After you have selected the view you would like, using the Directional Arrows you can highlight programs and retrieve the program information. If the program has a ★ in front of it, it's a new program, not a re-run.
5. To leave the Guide press the Exit button on your Remote Control at anytime.
6. If you find a program that you would like to view, press OK to make the selection. If the program isn't currently being shown and you would like to view it at that time, you can set a reminder or have the program switched automatically. (See page 21 for Using Reminder & Autotune features.)

Using the DVR Option

The DVR (Digital Video Recorder), which is also know as a PVR (Personal Video Recorder) allows you to record programs on your Set Top Box to view at a later time as well as pausing, fast forwarding, playing, or rewinding current programs. This feature is only available if you have a DVR Set Top Box. If you are unsure if you have a DVR Set Top Box, press the Menu button. If DVR is listed then you have the feature. If you do not have the feature and would like it, please contact us at (715)237-2605 and ask to be upgraded to the DVR Set Top Box. (See page 23 for Using DVR.) To access the DVR menu you can:

1. Simply press the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight DVR or  and press OK. You will see the following options:
 - a. Recording
 - b. To Record
 - c. Schedule Priority
 - d. Schedule Event
 - e. Record History

Selecting Recording

The Recording option is a listing of all programs that have been and currently are being recorded. (See page 26 for Viewing a Recorded Program.)

Selecting To Record

The To Record option is a list of all the programs that have been scheduled to be recorded. (See page 27 for Scheduling an Event.)

Selecting Schedule Priority

The Schedule Priority option allows you to determine which show is to be recorded if there is more than one scheduled to record at the same time.

Using Menu (continued)

Using the DVR Option continued (If applicable)

Selecting Schedule Event


The Schedule Event option allows you to set up recordings for programs that will be airing in the future. (See page 27 for Scheduling an Event.)

Selecting Record History

The Record History option displays a list of the recording information such as when the recording started, was completed, or was cancelled.

Using the My Library Option

The My Library option provides you with a history of information such as PPV purchases. To access the My Library feature:

1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight My Library or  and press OK.
3. You will see the following options:
 - a. Videos
 - b. PPV Events
 - c. Pay Per Block
 - d. Sports Packages
 - e. Reminders
 - f. Messages
 - g. Caller ID

Selecting Videos

The Videos option will provide you with a history of Video On Demand purchases, which is a service that will be available in the future.

Selecting PPV Events

The PPV Events option will provide you with a history of PPV purchases.

Selecting Pay per Block

The Pay per Block option will be available in the future.

Selecting Sports Packages

The Sports Packages option will provide you with a list of Sports Packages that you subscribe to.

Selecting Reminders

The Reminders option will provide you with a list of Reminders that have been scheduled.

Selecting Messages


The Messages option will provide you with a list of Messages that Citizens has sent to your Set Top Box.

Selecting Caller ID

The Caller ID option will provide you with a list of incoming Caller's information. (If applicable, see Enabling/Disabling Caller ID on page 22.)

Using the Settings Option

The Settings option allows you to create/edit preferences and create/edit users. To access the Settings feature:

1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight Settings or  and press OK.
3. Using the Number Pad enter your password and press OK.
4. You will see the following menu under Settings on the left hand side:
 - a. Preferences
 - b. Users

Preferences

The Preferences tab allows you to activate and deactivate the following features:

- a. Share Rentals
- b. Require Login
- c. Enable Caller ID
- d. Channel Blocking
- e. Parental Controls

Note: To activate any of these features, using the Directional Arrows highlight the box next to the text of each feature and press OK to place a checkmark. The feature can be deactivated by removing the checkmark.

To Require Login see page 13 under Creating Users.

To Enable Caller ID see page 22.

To set up Channel Blocking see page 6.

To set up Parental Controls see page 11.

Users


The Users tab allows you to edit current users as well as create new users and administer their unique settings. (See page 11 for Creating Users.)

Using the Favorites Option

The Favorites option allows you to edit channel lists that you have created. (See page 13 for Setting up Favorites.)

Using the Search Option

The Search feature allows you to enter keywords and then scan through the channels to find matches. To use the feature:

1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight Search or  and press OK.
3. The ENTER TEXT field will be highlighted. To delete the existing text, press the Last button located just below the Channel Up & Down button on the right side.
4. Press OK to show the Alpha/Numeric Pad. To choose a letter or number, using the Directional Arrows, highlight the character of choice and press OK to select.
5. Once you have entered the desired text, using the Directional Arrows, highlight Done and press OK.
6. Using the Directional Arrows, highlight Search Guide and press OK.

Using Menu (continued)


Using the Sign In/Out Option

The Sign In/Out option allows you to change Users once multiple users are available. (See Setting up Parental Controls below.)

Setting up Parental Controls

Establishing New Password & PIN (For added protection)

As the Main User, you will have administrative access to features such as Parental Controls. In order for you to have complete control over such features we recommend that you create a new password and PIN. This can be done by:

1. Pressing the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight Settings or  and press OK.
3. Using the Number Pad enter your password (default password is 0000) and press OK.
4. Using the Directional Arrows press the right arrow to highlight the Users tab and press OK.
5. A list of Users that have been created will appear. Using the Directional Arrows, highlight the Main User and press OK.
6. Using the Directional Arrows, highlight Edit and press OK. You will see fields for:
 - a. Password
 - b. New Password
 - c. Confirm Password
 - d. PIN
 - e. New PIN
 - f. Confirm PIN
 - g. Enable PIN
7. Using the Directional Arrows highlight the Password field. Enter the default password, 0000
8. Press the down arrow to highlight the New Password field. Enter the desired new numerical password and press OK.
9. Press the down arrow to highlight the Confirm Password field and enter the new password exactly as it was entered in the New Password field (If you receive an error, there is conflicting information)
10. Using the Directional Arrows highlight the PIN field and enter the default PIN, 0000
11. Press the down arrow to highlight the New PIN field and enter the desired new numerical PIN
12. Press the down arrow to highlight the Confirm PIN field and enter the new PIN exactly as it was entered in the New PIN field (If you receive an error, there is conflicting information)
13. Make sure that the new password and PIN are written down and stored in a safe place
14. Press the down arrow to highlight the box next to Enable PIN and press OK to place a checkmark
15. Press the down arrow to highlight Submit and press OK

Setting up Parental Controls

To set up Parental Controls follow these steps:

1. Press the Menu button on your Remote Control
 2. Using the Directional Arrows highlight Settings and press OK
 3. Using the Number Pad enter your password and press OK
 4. Using the Directional Arrows place a checkmark in the box next to Parental Controls
- Note: If this box does not have a checkmark in it - the Parental Controls WILL NOT work**
5. Using the Directional Arrows, highlight Submit and press OK
 6. You will see a box that says “Settings Successfully Updated” press OK to continue
 7. You can now go to Users (see page 11 for Creating Users)
 8. Press the Menu button on your Remote Control
 9. Using the Directional Arrows highlight Settings and press OK
 10. Using the Number Pad enter your password and press OK
 11. Press the down arrow to highlight Users
 12. Using the Directional Arrows, highlight the desired Users name and press OK to select User
 13. Using the Directional Arrows, highlight Parental Controls and press OK
 14. You can now select the Movie, TV, & Content Ratings that you do not want your child/children viewing:
 - a. (See page 17 for explanation of Movie & TV Ratings)
 - b. To set the Movie Rating, using your Directional Arrows highlight the Movie Rating field and press OK.
 - c. You will now see a left and right arrow on the sides of the field, using the Directional Arrows press the left and right arrows to set the ratings (The Movie Rating that is selected will be viewable. For example, if you do not want your child to view PG13 rated movies, make sure that the rating is set at PG. This will allow your child/children to view only G & PG rated movies.)
 - d. Once you have selected the Movie Rating, press the down arrow to see the TV Rating selection and press OK.
 - e. You will now see a left and right arrow on the sides of the field, using the Directional Arrows press the left and right arrows to set the ratings (The TV Rating that is selected will be viewable. For example, if you do not want your child to view PG rated TV shows, make sure that the rating is set at G. This will allow your child/children to view only Y, Y7, & G rated TV shows.)
 - f. For additional Content blocking, using the Directional Arrows place a checkmark in the box next to each rating.
 15. Once you have selected the Rating criteria, using your Directional Arrows highlight Submit and press OK.
 16. Clicking the Exit button on your Remote Control will return you to programming.
 17. To make sure the Parental Controls are in place, press the Guide button to view the Channel information. If the Channel has been blocked you will see the word RESTRICTED.
 18. Once you have found a channel that has been RESTRICTED, press OK.
 19. You should now see the text “This channel is currently playing restricted content” scrolling across the screen.
 20. If there is a Movie or TV rating that is not blocked and you do not want your child/children being able to view it, return to step 1 and adjust your ratings or you can set up another User with unique settings. (See Creating Users on page 13)
 21. If there is a Movie or TV show that is blocked and you as the Main User would like to be able to view it, you have the ability to unlock the Parental Controls.
(See Unlocking/Reactivating Parental Controls on page 13)

Setting up Parental Controls (continued)

Unlocking/Reactivating Parental Controls

If under the Main User settings you have blocked PG13 movies, and you find one that you would like to watch, you can unlock the Parental Controls while you are on that channel with the following steps:

1. Press OK
2. This will bring up a blue BLOCKED box
3. Highlight the Unlock Parental Controls options and press OK
4. Enter your password
5. You will now be able to view the program
6. To reactivate Parental Controls, press Menu
7. Using the Directional Arrows highlight Parental Controls - off and press OK
8. The Channel should now be blocked - Parental Controls are now on

Creating Users

The following steps will allow you to create unique settings for multiple users. For example, you could have one setting for your 15 year old child and another for your 7 year old child.


1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows highlight Settings and press OK.
3. Using the Number Pad enter your password and press OK.
4. Using the Directional Arrows, highlight the Require Login and press OK to place a checkmark in the box.
5. Using the Directional Arrows press the left arrow to highlight Users and press OK.
6. Press the down arrow to highlight Add and press OK.
7. Enter a Login such as a name or number - pressing OK twice will display the Alphanumeric Pad on the screen allowing you to enter both letters and numbers. To select a character, using the Directional Arrows, highlight the desired character, and press OK. Once you have your desired Login entered highlight Done and press OK.
8. Press the down arrow to highlight the New Password field.
9. Enter a new password which should be different than the password that you use to set controls.
10. Press the down arrow to highlight the Confirm Password field. Reenter the new password exactly as it was entered in the New Password field (If you receive an error, there is conflicting information).
12. Press the down arrow to the Allowance \$ field (This field will allow you to set a limit on the dollar amount that can be spent per month on PPV events. If this field is left blank the limit will default to zero.)
13. Check Enable Caller ID, if you'd like it to be displayed
14. Press the down arrow to the Enter PIN field.
15. Enter your PIN. (This is saying that you as the Main User are creating this User)
16. Press the down arrow to Continue and press OK.
17. A box with the text "Now Continue by setting Parental Controls" should flash on the screen.
18. Press OK.
19. You can now select the Movie, TV, & Content Ratings that you do not want your child/children viewing:
 - a. To set the Movie Rating, using your Directional Arrows highlight the Movie Rating field and press OK.

Creating Users continued

- b. You will now see a left and right arrow on the sides of the field, using the Directional Arrows press the left and right arrows to set the ratings. (Remember: The Movie rating that is selected will be viewable.)
 - c. Once you have selected the Movie Rating, press the down arrow to see the TV Rating selection and press OK.
 - d. You will now see a left and right arrow on the sides of the field, using the Directional Arrows press the left and right arrows to set the ratings. (Remember: The TV rating that is selected will be viewable.)
 - e. For additional Content blocking, using the Directional Arrows place a checkmark in the box next to each rating.
20. Once you have selected the Rating criteria, using your Directional Arrows highlight Submit and press OK.
 21. A box with the text "Account Created" should flash on screen, Press OK.
 22. Clicking the Exit button on your Remote Control will return you to programming.

Signing Users In


Once you have created an additional User, the Sign In option will appear when the Menu button on your Remote Control has been pressed. To switch to a different User's settings:

1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows highlight Sign In or  and press OK.
3. You will see a blue screen that requires you to enter a name and password to sign in.
4. Using the Directional Arrows highlight the Name field and press OK.
5. You will now see an arrow on the top and an arrow on the bottom of the field, using the Directional Arrows press the down arrow to see the available Users.
6. Once you have found the desired User press OK to select.
7. Using the Directional Arrows press the down arrow to highlight the Password field.
8. Enter the password assigned to the User in the Name field
9. Press OK to activate the User's settings.

Now when you press Menu the Sign In option will read Sign Out. At anytime you can switch to different Users settings by highlighting the Sign Out option, pressing OK, and repeating steps 3 through 9.

Editing Users Settings

At anytime, you can edit current settings for each User by:

1. Pressing the Menu button on your Remote Control.
2. Using the Directional Arrows highlight Settings or  and press OK. (If you do not see the Settings option, see Signing Users In above and sign in as the Main User)
3. Using the Number Pad enter your password and press OK.
4. Using the Directional Arrows, press the right arrow and highlight Users.

From here you can either edit the User Information or edit the Parental Controls you have set up.

Setting up Parental Controls (continued)

Editing User Information

1. Using the Directional Arrows, highlight the desired User and press OK to place a dot in the circle next to the Username.
2. Using the Directional Arrows, highlight Edit and press OK.
3. Using the Number Pad on the Remote Control, enter your password and press OK.
4. Using the Directional Arrows, you can highlight and edit the Login Name, Password, Theme, Dollar Allowance, and whether the Caller ID is enabled or not.
5. Using the Number Pad on the Remote Control, enter the Main User PIN number
6. When changes are complete, highlight Submit and press OK.

Editing Parental Controls


1. Using the Directional Arrows, highlight the desired User and press OK to place a dot in the circle next to the Username.
2. Press the down arrow to highlight Parental Controls and press OK.
3. Using the Directional Arrows, you can highlight and edit the Movie Rating, TV Rating, and additional content restrictions.
4. When changes are complete, highlight Submit and press OK.

Setting up Favorites

Creating Favorites Folders

If there are several channels that you seem to watch repeatedly, you can create Favorites tabs that will be available on the Program Guide so you do not have to flip through all of the channels trying to find the ones you like.

Set up your Favorites folders by doing the following:

1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight Favorites or  and press OK.
3. You will see the following options:
 - a. Choose
 - b. Edit
 - c. Create
 - d. Delete
 - e. Cancel

Note: Each User can have their own Favorites folders. Be sure that you are under the User you want to be.

Selecting Choose

The Choose option will allow you to set which guide you would like to see when you press the Guide button. For example, if you selected the Choose option you will see a field with an up and down arrow, using the Directional Arrows, you may see the following options:

1. All
2. Subscribed
3. SD
4. HD

Using the Directional Arrows, highlight the desired guide and press OK, then using the Directional Arrows, highlight OK and press OK.

Selecting Edit

The Edit option allows you to add or remove channels from the Favorites folder(s) by:

1. Using the Directional Arrows, highlight Edit and press OK.
2. It will automatically show the folder that is currently selected as the Guide list.
3. Using the Directional Arrows, find the Guide that you want to edit and press OK to select it.
4. Using the Directional Arrows, highlight OK and press OK.
5. Using the Directional Arrows, find the channels you would like to add or remove and press OK.
6. If adding a channel a blue heart should appear alongside those channels that are included on the list.
If removing a channel the blue heart should disappear.
7. Once all channels are selected, press the right Directional Arrow to highlight the Update button.
8. Press OK and you will be returned to programming.

Selecting Create

The Create option allows you to add Favorites folders. You can create up to 5 folders by:

1. Using the Directional Arrows, highlight Create and press OK.
2. The folder will automatically be named as Favorites1, Favorites2, etc. The folder name can be changed by:
 - a. With the Favorites1, Favorites2, etc. being highlighted, press the Last button, located just above the Directional Arrows on the right side will delete the text.
 - b. Once deleted press OK and the Number Pad will appear.
 - c. Enter desired name.
 - d. Using the Directional Arrows go to Done and press OK
3. Using the Directional Arrows, find the channels you would like to add and press OK.
4. A blue heart should appear alongside the channel information. If you accidentally selected the wrong channel, pressing the OK button will remove the blue heart.
5. Once all of the channels are selected, press the right Directional Arrow to highlight the Update button and press OK.
6. Your folder is now created and will be available for future use.
7. To create more folders return to step 1 and repeat.

Selecting Delete

The Delete option allows you to delete Favorites folders that have been created by:

1. Using the Directional Arrows, highlight Delete and press OK.
2. Using the Directional Arrows, highlight the desired folder and press OK to select it.
3. Using the Directional Arrows, highlight OK and press OK.
4. You will see a pop-up that says: "Are you sure you want to delete Favorites?"
5. If yes, press OK.
6. If no, using the Directional Arrows highlight No and press OK.

TV & Movie Ratings Guide

TV Parental Guidelines Ratings



All Children

This program is designed to be appropriate for all children. Whether animated or live-action, the themes and elements in this program are specifically designed for a very young audience, including children from ages 2 - 6. This program is not expected to frighten younger children.



Directed to Older Children

This program is designed for children age 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence or comedic violence, or may frighten children under the age of 7. Therefore, parents may wish to consider the suitability of this program for their very young children.



Directed to Older Children - Fantasy Violence

For those programs where fantasy violence may be more intense or more combative than other programs in this category, such programs will be designated TV-Y7-FV.



General Audience

Most parents would find this program suitable for all ages. Although this rating does not signify a program designed specifically for children, most parents may let younger children watch this program unattended. It contains little or no violence, no strong language and little or no sexual dialogue or situations.



Parental Guidance Suggested

This program contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The theme itself may call for parental guidance and/or the program may contain one or more of the following: some suggestive dialogue (D), infrequent coarse language (L), intense sexual situations (S), or intense violence (V).



Parents Strongly Cautioned

This program contains some material that many parents would find unsuitable for children under 14 years of age. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program may contain one or more of the following: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).



Mature Audience Only

This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. This program may contain one or more of the following: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).

Motion Picture Association of America Ratings



General Audience

A G-rated motion picture contains nothing in theme, language, nudity, sex, violence, or other matters that, in the view of the Rating Board, would offend parents whose younger children view the motion picture. The G rating is not a “certificate of approval,” nor does it signify a “children’s” motion picture. Some snippets of language may go beyond polite conversation, but they are common everyday expressions. No stronger words are present in G-rated motion pictures. Depictions of violence are minimal. No nudity, sex scenes, or drug use are present in the motion picture.



Parental Guidance Suggested

A PG-rated motion picture should be investigated by parents before they let their younger children attend. The PG rating indicates, in the view of the Rating Board, that parents may consider some material unsuitable for their children, and parents should make that decision. The more mature themes in some PG-rated motion pictures may call for parental guidance. There may be some profanity and some depictions of violence or brief nudity. But these elements are not deemed so intense as to require that parents be strongly cautioned beyond the suggestion of parental guidance. There is no drug use content in a PG-rated motion picture.



Parents Strongly Cautioned

A PG-13 rating is a sterner warning by the Rating Board to parents to determine whether the children under age 13 should view the motion picture, as some material might not be suited for them. A PG-13 motion picture may go beyond the PG rating in theme, violence, nudity, sensuality, language, adult activities or other elements, but does not reach the restricted R category.



Restricted

An R-rated motion picture, in the view of the Rating Board, contains some adult material. An R-rated motion picture may include adult themes, adult activity, hard language, intense or persistent violence, sexually-oriented nudity, drug abuse or other elements, so that parents are counseled to take this rating very seriously. Children under 17 are not allowed to attend R-rated motion pictures accompanied by a parent or adult guardian. Parents are strongly urged to find out more about R-rated motion pictures in determining their suitability for their children. Generally, it is not appropriate for parents to bring their young children with them to R-rated motion pictures.



No One 17 and Under Admitted

An NC-17 rated motion picture is one that, in the view of the Rating Board, most parents would consider patently too adult for their children 17 and under. No children will be admitted. NC-17 does not mean “obscene” or “pornographic” in the common or legal meaning of those words, and should not be construed as a negative judgment in any sense. The rating simply signals that the content is appropriate only for an adult audience. An NC-17 rating can be based on violence, sex, aberrational behavior, drug abuse or any other element that most parents would consider too strong and therefore off-limits for viewing by their children.

Purchasing Events

Purchasing PPV (Pay per View) Events

If there is an event on the PPV channels, you can purchase them at any time, for an additional cost that may vary per program. Note: There are two types of PPV Events: PPV and ADT. PPV is a single event and only lasts until the event is completed. ADT is an ALL Day Ticket, which allows you to view the same event throughout the day. To find out what the event you would like to view is, press the Info button, and either PPV or ADT will show up under the channel number.

To purchase a **LIVE** event:

1. Once you have found the event you would like to view, press OK
2. You will be able to preview the event for 10 minutes
3. If you decide at anytime during the preview that you would like to watch the entire event, you can purchase it by:
 - a. Pressing OK
 - b. You will see the following options:
 - i. Add to Favorites
 - ii. Expanded Info
 - iii. Buy PPV
 - iv. Cancel
 - c. Highlight Buy PPV and press OK
 - d. To purchase, highlight Buy and press OK
 - e. To cancel, highlight Cancel and press OK
 - f. If you would like to allow other Users to view this same event, highlight the field next to Share and press OK to place a checkmark (See Creating Users on page 13.)
4. After 10 minutes the preview will end and a pop-up will appear on the screen that allows you to buy or cancel the event.
5. To purchase, highlight Buy and press OK or To cancel, highlight Cancel and press OK
6. If you would like to allow other Users to view this same event, highlight the field next to Share and press OK to place a checkmark (See Creating Users on page 13.)

To purchase a **FUTURE** event:

1. Once you have found the event you would like to view, press OK
2. You will be see the following options:
 - a. Expanded Info
 - b. Buy PPV
 - c. Cancel
3. Highlight Buy PPV and press OK
4. To purchase, highlight Buy and press OK or To cancel, highlight Cancel and press OK
5. If you would like to allow other Users to view this same event, highlight the field next to Share and press OK to place a checkmark (See Creating Users on page 13.)

When you purchase a FUTURE event, you can set up a Reminder that will pop-up on the screen while you are viewing other programs or set it to automatically change to the event. (See Using Reminder & Autotune features on page 21.)

Canceling PPV (Pay per View) Events


If for some reason, you are not able to or do not want to view the scheduled PPV event at this time, you have the option of canceling the purchase. **You cannot cancel the event once it has started, this includes All Day Tickets (ADT).**

Canceling a **FUTURE** event:

1. Press the Guide button on your Remote Control
2. Using the Directional Arrows, highlight the event that you would like to cancel and press OK
3. You will see the following options:
 - a. Record Program
 - b. Set Reminder
 - c. Set Autotune
 - d. Cancel PPV Purchase
 - e. Expanded Info
 - f. Buy Next PPV
 - g. Cancel
4. Using the Directional Arrows, highlight Cancel PPV Purchase and press OK
5. Your purchase is now canceled

Viewing a history of PPV (Pay per View) Events

If you have purchased any of the PPV Events, you can view a history of the purchases by:

1. Pressing the Menu button on your Remote Control
2. Using the Directional Arrows, highlight My Library or  and press OK
3. You will see the following options:
 - a. Video
 - b. PPV Events
 - c. Pay per block
 - d. Sports Packages
 - e. Reminders
 - f. Messages
 - g. Caller ID

To view a history of **PPV** Events

1. Using the Directional Arrows, highlight PPV Events and press OK
2. In the area to the right of the PPV Events you will now see a history of all PPV purchases

Using Advanced Features

Using the Reminder & Autotune Features

If, in the process of scrolling through the channels, you find a program that will be showing at a later time or date you can use the Reminder or Autotune features to make sure you don't miss it.

Once you have found the program you would like to view at a later time or date press OK to select an action and you will see the following options:

1. Schedule Event
2. Record Program (if applicable)
3. Record Series (if applicable)
4. Set Reminder
5. Set Autotune
6. Expanded Info
7. Cancel

Selecting Schedule Event


Using the Schedule Event option will allow you to set the criteria for your reminder or autotune event. (See page 27 for Scheduling an Event).

Selecting Record Program & Record Series

The Record Program and Record Series options are only available if you have a DVR Set Top Box. These options allow you to record the programs and will be available for you to watch at a later time. (See Using DVR on page 23.)


Selecting Set Reminder

Using the Set Reminder option will prompt a box to pop-up on your screen at the start time of the desired program. To set a Reminder:

1. Using the Directional Arrows, highlight Set Reminder and press OK.
2. In the Guide next to the program you will see a  icon.
3. At the time the program begins you will see a box moving on your screen with the following information: PROGRAM REMINDER. (Station Name) Press info to view details.
4. Pressing the info button will give you a brief description on the programming

Selecting Set Autotune

Using the Set Autotune option will automatically transfer you to the desired program. To set Autotune:


1. Using the Directional Arrows, highlight Set Autotune and press OK.
2. In the Guide next to the program you will see a  icons.
3. When the program begins you will see a box pop-up on your screen with the Program Name as well as the Channel Number. You will be able to Tune In to the program or Cancel the Autotune.

Selecting Expanded Info

Using the Expanded Info option will provide you with the channel information.


Viewing a history of Reminders

If you have set any Reminders for programs, you can view them by:

1. Pressing the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight My Library or  and press OK.
3. You will see the following options:
 - a. Video
 - b. PPV Events
 - c. Pay Per Block
 - d. Sports Packages
 - e. Reminders
 - f. Messages
 - g. Caller ID
4. Using the Directional Arrows, highlight Reminders and press OK


Enabling/Disabling Caller ID

If you have the Caller ID feature from Citizens you are able to allow the Caller ID to show up on the TV screen when you receive an incoming call. If you do not have the Caller ID feature and would like it please contact our Corporate Office at (715)237-2605 to get it added on your account. To enable Caller ID:

1. Press the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight Settings or  and press OK.
3. Using the Number Pad enter your password and press OK.
4. Using the Directional Arrows place a checkmark in the box next to Enable Caller ID.
5. Using the Directional Arrows, highlight Caller ID Timeout located second from the bottom of the menu on the right side. This allows you to set how long you would like the Caller ID information to remain on the TV screen. To select, highlight the field and press OK.
6. You will see two arrows, one on each side of the field. Using the Directional Arrows press the left or right arrows to set the time. Time ranges from 5 second up to 45 seconds in 5 second increments.
7. Once you have found your desired time press OK.
8. Using the Directional Arrows, highlight Submit and press OK.
9. Your Caller ID is now enabled!
10. To disable Caller ID, follow steps 1 through 3 and remove the checkmark from the box.

Viewing a history of Incoming Calls


If you have received any incoming calls, you can view the Caller's information by:

1. Pressing the Menu button on your Remote Control.
2. Using the Directional Arrows, highlight My Library or  and press OK.
3. You will see the following options:
 - a. Video
 - b. PPV Events
 - c. Pay Per Block
 - d. Sports Packages
 - e. Reminders
 - f. Messages
 - g. Caller ID
4. Using the Directional Arrows, highlight Caller ID and press OK.

Using DVR

Whole-Home DVR (Digital Video Recorder)

The DVR, which is also known as a PVR, allows you to record programs on your Set Top Box to view at a later time as well as pause, fast forward, play, or rewind LIVE programs. You and your family also have the ability to watch and control pre-recorded shows from any room in your home from any connected TV as well as the ability to schedule your DVR to record from any internet-connected device.

If you do not have the feature and would like it, please contact us at (715)237-2605. This feature is only available if you have a Whole-Home DVR Set Top Box. If you are unsure if you have a Whole-Home DVR Set Top Box, press the Menu button. If DVR or  is listed then you have the feature. If you do not have the feature and would like it, please contact us at (715)237-2605 and ask to be upgraded to the Whole-Home DVR Set Top Box.


Controlling LIVE Programs

With the DVR feature you will be able to pause, fast forward, play, or rewind the program that you are currently watching by using the VCR/DVD/DVR Controls buttons (Pause, Rewind, Fast Forward, Play, or Stop) on your Remote Control. Any time one of the Control buttons is pressed, a bar will appear on the top part of your screen allowing you to see which control is being used and where the program is in the timeline.

Once you have selected the channel, the DVR starts recording the programming and will continue to do so until you switch to another channel. When you switch to the other channel, the DVR will begin recording that programming until you switch channels again. Note: Returning to the previous channel will not restore the recordings for that channel. The recording then starts over.

Recording Programs

To record a **LIVE** program:

1. Once you have found a program that is currently playing that you would like to record, press OK.
2. You will see the following options:
 - a. Record Program
 - b. Record Series
 - c. Expanded Info
 - d. Cancel
3. Using the Directional Arrows, highlight Record Program or Record Series and press OK.
4. Your program is now being recorded and will automatically stop when program ends.
5. You can make sure that the program is being recorded by:
 - a. Pressing Guide and seeing a red dot next to the Program Name OR
 - b. Pressing the Menu button on your Remote Control.
 - c. Using the Directional Arrows, highlight DVR or  and press OK.
 - d. Using the Directional Arrows, highlight Recording. You should see the name of the program that is being recorded along with a red dot.


To revise the recording of a **LIVE** program:

1. With the program that is currently being recorded on the screen, press OK.
2. You will see the following options:
 - a. Stop Recording
 - b. Expanded Info
 - c. Cancel


To Stop the current recording:

1. Using the Directional Arrows, highlight Stop Recording and press OK.
2. A pop-up box with the question “Would you like to stop recording?” To exit, select No. To stop recording, select Yes.

To Extend the current recording time:

1. Press the Menu button
2. Using the Directional Arrows, highlight DVR or  and press OK.
3. Using the Directional Arrows, highlight Schedule Event and press OK
4. You will now be able to extend the minutes of recording from 1 minute up to 60 minutes by:
 - a. Using the Directional Arrows, highlight the minutes field and press OK.
 - b. You will now see one arrow on each side of the field, using the Directional Arrows, press the right or left arrow to select the number of minutes to extend recording.
 - c. To keep the number of minutes, using the Directional Arrows, highlight OK and press OK.
 - d. To cancel, using the Directional Arrows, highlight Cancel and press OK.

To record a **FUTURE** program:

1. Once you have found a program that will be shown in the future that you would like to record, press OK.
2. You will see the following options:
 - a. Schedule Event
 - b. Record Program
 - c. Record Series
 - d. Set Reminder
 - e. Set Autotune
 - f. Expanded Info
 - g. Cancel
3. Highlight Record Program to record a single program or Record Series to record the entire series and press OK.
4. Your program will automatically be recorded when it starts and will stop when the program ends.
5. You can make sure that the program will be recorded by:
 - a. Pressing the Guide button and you will see a red dot next to the Program Name.
 - b. Pressing the Menu on your Remote Control.
 - c. Using the Directional Arrows, highlight DVR or  and press OK.
 - d. Using the Directional Arrows, highlight To Record and press OK. You should see the name of the program that will be recorded along with a red dot. If you are recording a series, you will see a red dot with a plus sign next to it.

Using DVR (continued)

To edit a **SERIES** of programs:

1. In the Guide, highlight the program and press OK
2. You will see the following options:
 - a. Edit Recording
 - b. Edit Series Recording
 - c. Skip Episode
 - d. Cancel Series Recording
 - e. Set Reminder
 - f. Set Autotune
 - e. Expanded Info
 - f. Cancel
3. Highlight Edit Series Recording and you will see the following options: Channels, Preference, Episodes, Start, End, and Limit to. To change the default simply highlight the box and press OK. View your options by using the Directional Arrows.
4. When completed adjusting fields, highlight OK and press OK.

To Cancel a recording of a **SERIES** of programs:

1. In the Guide, highlight the show and press OK
2. You will see the following options:
 - a. Edit Recording
 - b. Edit Series Recording
 - c. Skip Episode
 - d. Cancel Series Recording
 - e. Set Reminder
 - f. Set Autotune
 - e. Expanded Info
 - f. Cancel
3. Highlight Cancel Series Recording and press OK.
4. You will see a box asking "Would you like to cancel this series?" Using the Directional Arrows, highlight Yes and press OK.
5. Your series of programs will no longer be recorded.


To Skip the recording of a single show in a **SERIES** of programs:

1. In the Guide, highlight the show and press OK.
2. You will see the following options:
 - a. Edit Recording
 - b. Edit Series Recording
 - c. Skip Episode
 - d. Cancel Series Recording
 - e. Set Reminder
 - f. Set Autotune
 - e. Expanded Info
 - f. Cancel
3. Highlight Skip Episode and press OK.
4. The selected episode will no longer be recorded and a gray button with a plus sign next to it will appear in front of the program title

5. If you decide at a later time that you would like to record that episode again:
 - a. Press the Guide button on your Remote Control
 - b. Using the Directional Arrows, highlight the program and press OK
 - c. You will see the following options:
 - i. Edit Recording
 - ii. Edit Series Recording
 - iii. Record Episode
 - iv. Cancel Series Recording
 - v. Set Reminder
 - vi. Set Autotune
 - vii. Expanded Info
 - viii Cancel
 - f. Using the Directional Arrows, highlight Record Episode and press OK.
 - e. Your selected episode will resume being recorded and a red button with a plus sign will appear in front of the program title.

Viewing a Recorded Program

To view a program that you have recorded:

1. Press the Menu button on your Remote Control
2. Using the Directional Arrows, highlight DVR or  and press OK.
3. Using the Directional Arrows, highlight Recording and press OK.
4. Press the right Directional Arrow to highlight the first program listed. If there are multiple episodes of the same program, you will see a red folder with a plus sign.
5. Once you have found the program that you would like to view press OK.
6. You will see the following options:
 - a. Play Recording
 - b. Resume Play (if the program has been paused during playback)
 - c. Lock
 - d. Delete Recording
 - e. Cancel

Selecting Play Recording

The Play Recording option will allow you to view the recording from the beginning. To play the recording:

1. Make sure the Play Recording option is highlighted and press OK.
2. Your selection will begin playing.
3. At any time you can adjust the play back by using the VCR/DVD/DVR Controls.

Selecting Resume Play (if the program has been paused during playback)

The Resume Play option allows you to start the program where you left off in the event that you had to stop viewing the program once you selected Play Recording. To resume play:

1. Using the Directional Arrows, highlight Resume Play and press OK.
2. Your selection will begin playing from the point it was stopped.

Using DVR (continued)

Selecting Lock

The Lock option allows you as the Main User to block the other Users from viewing or deleting your recorded program. To lock the program:

1. Make sure the program you would like to lock is highlighted.
2. Using the Directional Arrows, highlight Lock and press OK.
3. You will now see a lockpad next to your selected program. Your program is now locked.
4. To unlock the program, simply press OK.
5. Using the Directional Arrows, highlight Unlock and press OK.
6. The padlock should no longer be there. Your program is now unlocked.


Selecting Delete Recording

The Delete Recording option will allow you to delete the recorded program from the Recordings option. To delete a program from the Recordings display:

1. Make sure the program you would like to delete is highlighted..
2. Using the Directional Arrows, highlight Delete Recording and press OK.

Scheduling an Event - At Home

At any time you can schedule a reminder, plan a recording, or have your screen automatically switch to the program of your choice by:

1. Press the Menu button on your Remote Control
2. Using the Directional Arrows, highlight DVR or  and press OK
3. Using the Directional Arrows, highlight Schedule Event and press OK.
4. A pop-up box will appear on your screen and will include information from the current program. From here you have the ability to select the channel, length of time, the date, the start time, type of event, and frequency. To edit any of the criteria:
 - a. Using the Directional Arrows, highlight the desired field and press OK.
 - b. An arrow above the field and one below the field will appear, using the Directional Arrows, press the up or down arrow to change the information.
 - c. Once you have the criteria adjusted the way you would like press OK.
 - d. Repeat steps a - c until all the criteria has been set.
 - e. When all the criteria has been set, using the Directional Arrows, highlight OK and press OK.
5. Your event has now been scheduled.

Scheduling an Event - Away From Home

At any time you can schedule a recording from any internet-connected device by:

1. Go to www.citizens-connected.com
2. Click on My Account in the upper right hand side
3. Click on Select Access
4. Enter your username & password
5. Click on Login

Whole-Home DVR

The house icon means that the recording is being stored on another Set Top Box in your home that is connected to the Whole Home DVR Access.

WatchTVEverywhere

With WatchTVEverywhere, you can watch select TV programs from devices such as smartphones, tablets, laptops, desktops, and even Smart TVs.

WatchTVEverywhere works anywhere you can receive an Internet signal*: inside your house, at the office, shopping mall, hotel, airport, vacation home, etc. It includes live TV for some channels & has full episodes of current TV shows.**

* The quality of WatchTVEverywhere signals while roaming (airports, stores, etc.) will vary depending on the strength of the signal. Data usage and roaming charges apply. Flash-enabled browsers are required to watch TV programs.

**Programming availability may vary.

Registering to WatchTVEverywhere

1. Log onto www.citizens-connected.com
2. Click on My Account in the upper right hand side
3. Click on WatchTVEverywhere icon
4. In the dropdown menu next to "Select your tv provider" scroll down and select Select - Citizens Connected area and click Submit
5. Click Register
6. You will need two pieces of information, which can be found on your last Citizens Connected statement to register:
 - Your account number and
 - The correct spelling of the last name on the account
7. You will be asked to:
 - Provide an e-mail address. This will be your username. This can be any valid e-mail address.
 - Provide a password
 - Select a password reset question
 - Supply the answer to the password reset question
8. Click on Register
9. Check the e-mail address you provided. You will find an e-mail message with your WatchTVEverywhere activation link. Click on the link to complete the registration process.
10. You are done and can begin to enjoy WatchTVEverywhere!

To WatchTVEverywhere

1. Log onto www.citizens-connected.net
2. Click on My Account in the upper right hand side
3. Click on WatchTVEverywhere icon
4. Click on Log In
5. Enter your username and password
6. Select the TV Network you want to watch. Click on the network and you will see a list of the available programs.

Please be sure to check data plan before you start watching on a smart phone or wireless network.

WatchTVEverywhere programs transmit a lot of data, which can become expensive if you have a limited data plan.

ADB 2500W Set Top Box Guide

Front Panel View




Below is an explanation for each of the controls and lights listed above.

The **Power** light is green when the Set Top Box is on.

The **Link** light is red when the Set Top Box is receiving a channel.

The **Status** light is yellow when the Set Top Box is rebooting.

Rear Panel View

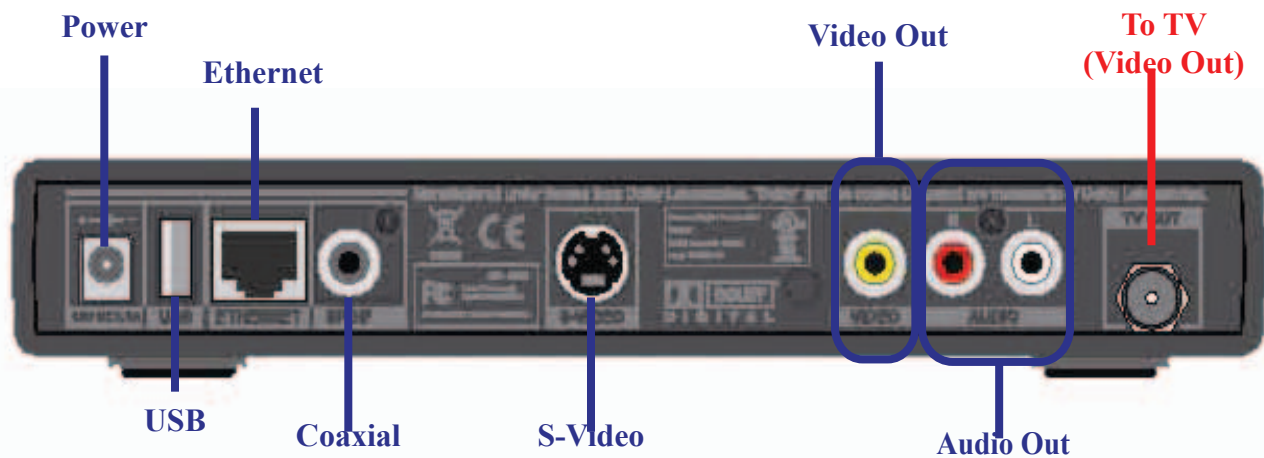

Below is an explanation for each of the connections listed above.

The **Ethernet** is a RJ-45 port for IP video output.

The **S-Video** (Super Video or Separated Video) is for a high quality video output to a VCR or TV that accepts S-Video. It carries video *only*; you must also connect to the TV or home theater receiver for audio.

The **Coaxial** is for a BNC-to-RCA adapter (S/PDIF) audio output to a digital home theater receiver.

The **Video Out** is for RCA video outputs to a TV, VCR, or other device.

The **Audio Out** are for left and right RCA stereo audio outputs.

The **To TV (Video Out)** is for coaxial output to connect the TV receiver to the TV or VCR.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.

The **Power** is the connector for the DC power adapter.

ADB 3800 Set Top Box Guide

Front Panel View



Below is an explanation for each of the controls and lights listed above.

The **Power** button, if held for less than five seconds, turns the Set Top Box on or off. If held for five seconds longer, it restarts the TV receiver. When the Set Top Box is on the light is green.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.


The **HD** (High-Definition) light is green when the Set Top Box is receiving a high-definition program. Call Citizens at (715)237-2605 to find out if you can receive HD programming as it is not available in all areas.

The **Menu** button displays the Menu.

The **Directional Arrows** allow you to change the channels and move through the program guide.

The **OK** button allows you to select channels or Menu options.

Rear Panel View

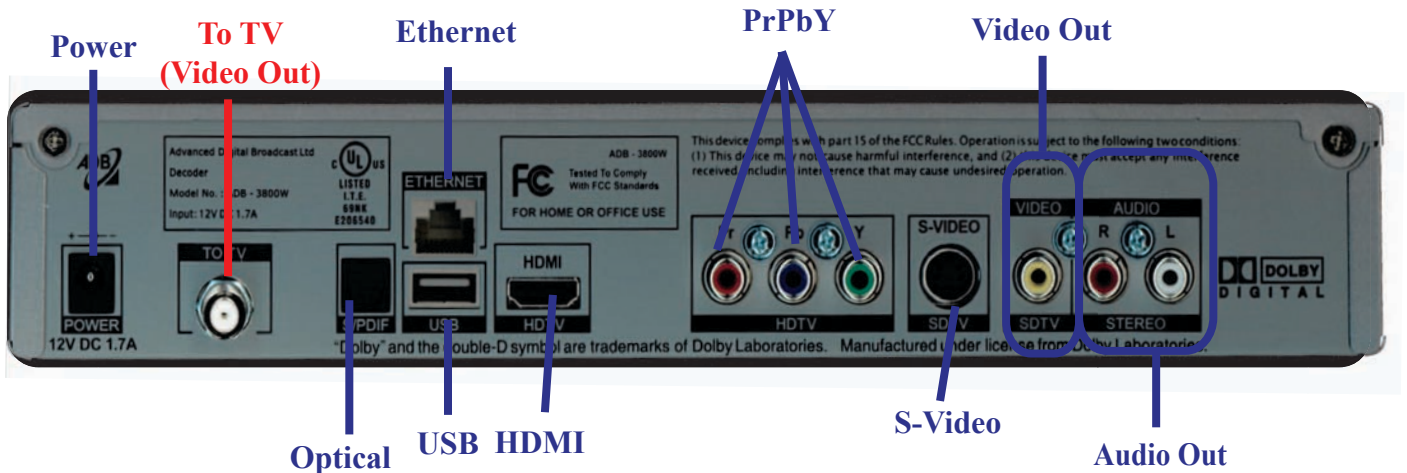

Below is an explanation for each of the connections listed above.

The **To Wall (Video In)** is for coaxial input for digital signal.

The **HDMI** (High-Definition Multimedia Interface) connects to a high-definition TV or home theater receiver with an HDMI input (for a DVI input, use an HDMI-to-DVI adapter.)

The **Ethernet** is a RJ-45 port for IP video output.

The **Pr, Pb, & Y** are for RCA component video outputs to an HDTV.

The **S-Video** (Super Video or Separated Video) is for a high quality video output to a VCR or TV that accepts S-Video. It carries video *only*; you must also connect to the TV or home theater receiver for audio.

The **Optical** is for a Toslink (S/PDIF) audio output to a digital home theater receiver.

The **Video Out** is for RCA video outputs to a TV, VCR, or other device.

The **Audio Out** are for left and right RCA stereo audio outputs.


The **To TV (Video Out)** is for coaxial output to connect the TV receiver to the TV or VCR.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.

The **Power** is the connector for the DC power adapter.

ADB 5810 Set Top Box Guide

Front Panel View

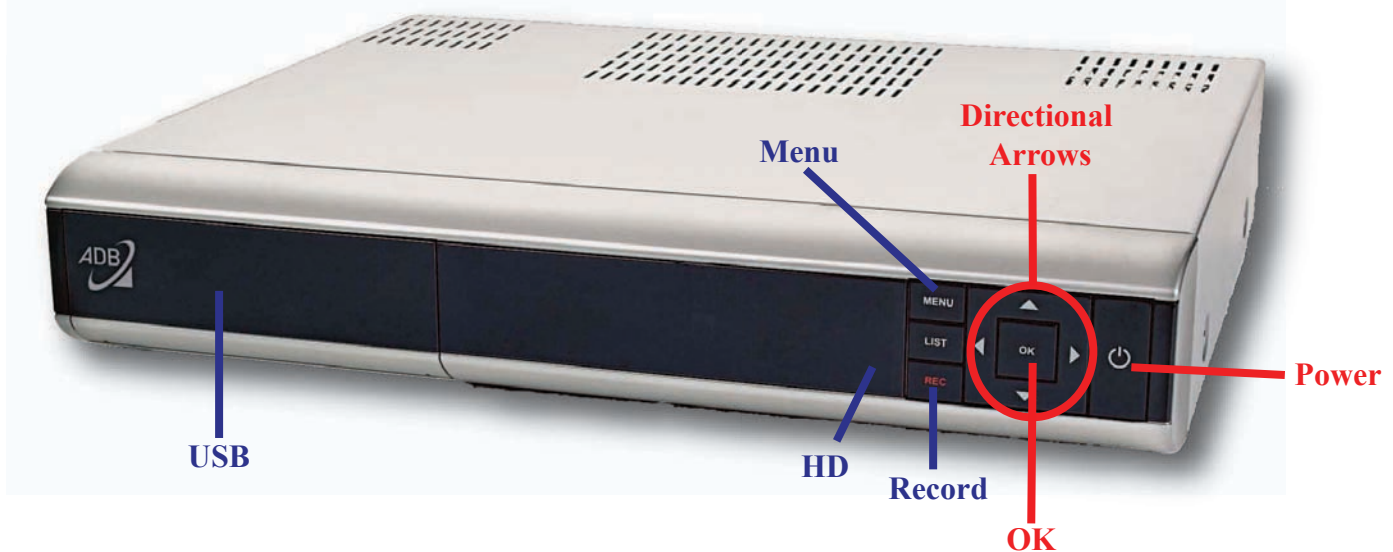

Below is an explanation for each of the controls and lights listed above.

The **Power** button, if held for less than five seconds, turns the Set Top Box on or off. If held for five seconds longer, it restarts the TV receiver. When the Set Top Box is on the light is green.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.

The **HD** (High-Definition) light is green when the Set Top Box is receiving a high-definition program. Call Citizens at (715)237-2605 to find out if you can receive HD programming as it is not available in all areas.


The **Menu** button displays the Menu.

The **Directional Arrows** allow you to change the channels and move through the program guide.

The **OK** button allows you to select channels or Menu options.

The **Record** button allows you to record channels.

Rear Panel View

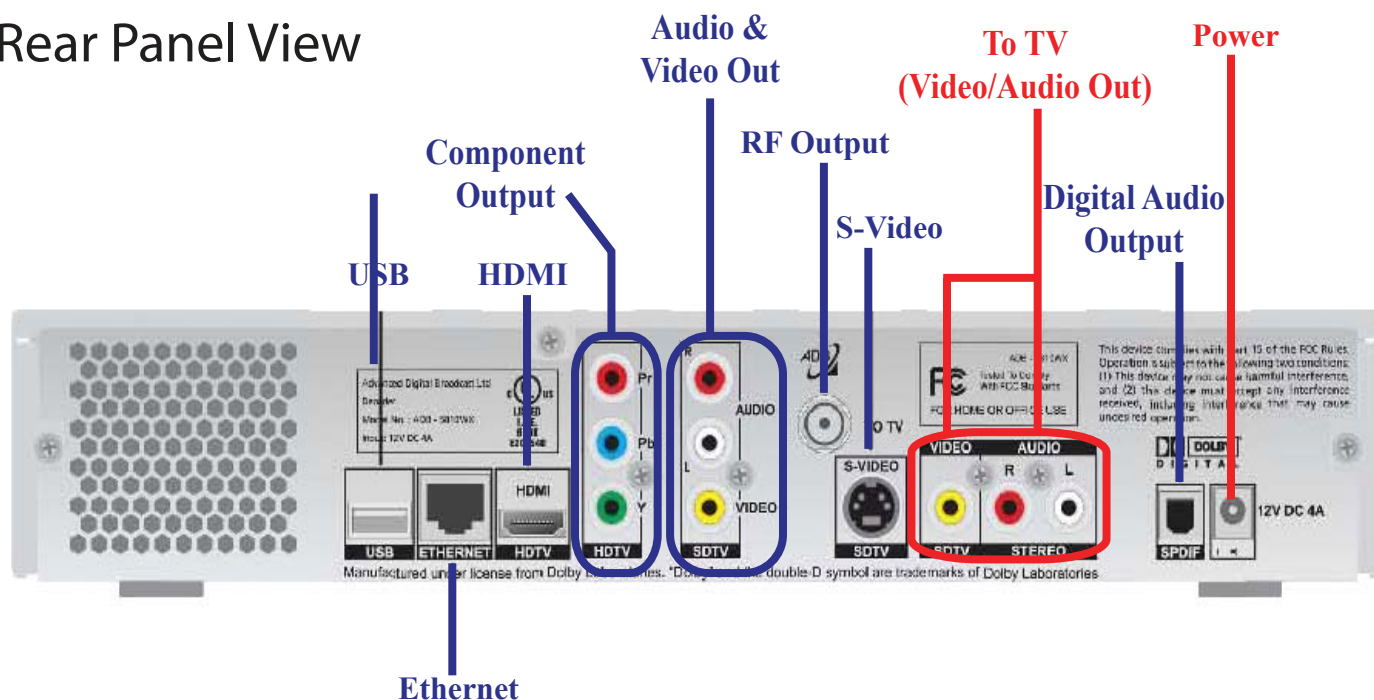

Below is an explanation for each of the connections listed above.

The **HDMI** (High-Definition Multimedia Interface) connects to a high-definition TV or home theater receiver with an HDMI input (for a DVI input, use an HDMI-to-DVI adapter.)

The **Ethernet** is a RJ-45 port for IP video output.

The **Pr, Pb, & Y** are for RCA component video outputs to an HDTV.

The **S-Video** (Super Video or Separated Video) is for a high quality video output to a VCR or TV that accepts S-Video. It carries video *only*; you must also connect to the TV or home theater receiver for audio.

The **Optical** is for a Toslink (S/PDIF) audio output to a digital home theater receiver.

The **Video Out** is for RCA video outputs to a TV, VCR, or other device.

The **Audio Out** are for left and right RCA stereo audio outputs.


The **To TV (Video Out)** is for coaxial output to connect the TV receiver to the TV or VCR.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.

The **Power** is the connector for the DC power adapter.

ADB 5721WNX Set Top Box Guide

Front Panel View

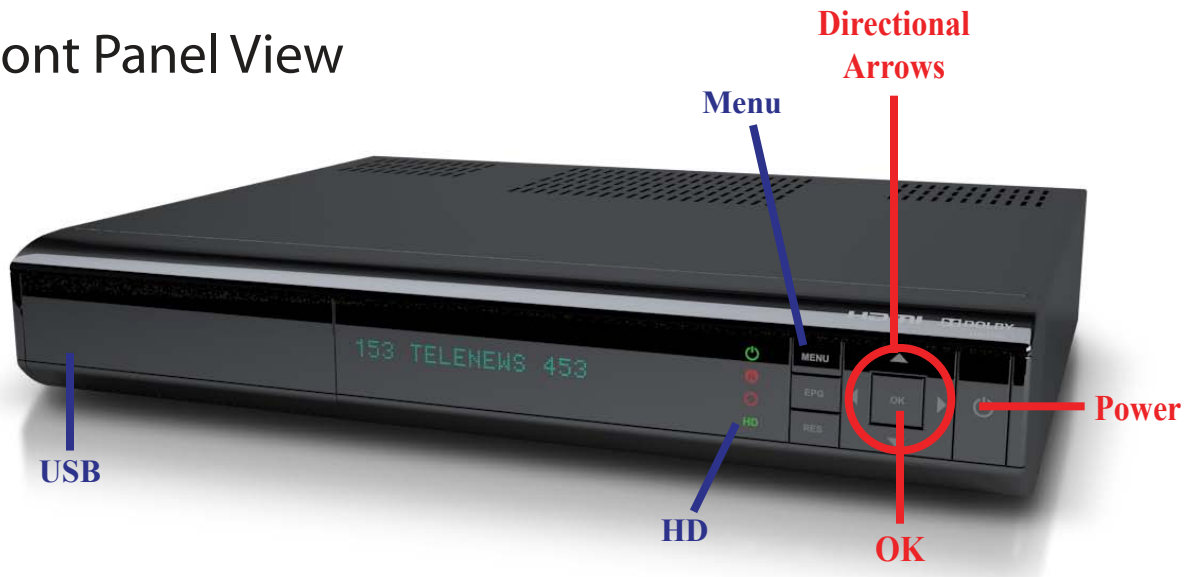

Below is an explanation for each of the controls and lights listed above.

The **Power** button, if held for less than five seconds, turns the Set Top Box on or off. If held for five seconds longer, it restarts the TV receiver. When the Set Top Box is on the light is green.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.


The **HD** (High-Definition) light is green when the Set Top Box is receiving a high-definition program. Call Citizens at (715)237-2605 to find out if you can receive HD programming as it is not available in all areas.

The **Menu** button displays the Menu.

The **Directional Arrows** allow you to change the channels and move through the program guide.

The **OK** button allows you to select channels or Menu options.

Rear Panel View

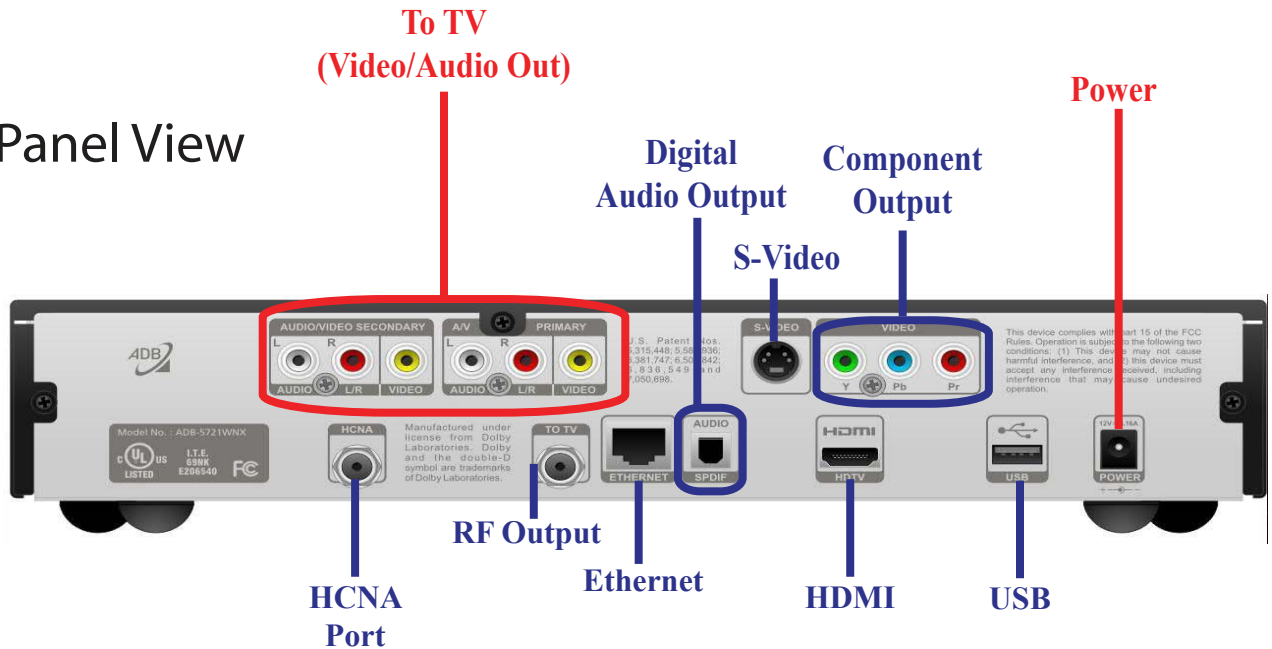

Below is an explanation for each of the connections listed above.

The **HDMI** Port(High-Definition Multimedia Interface) connects to a high-definition TV or home theater receiver with an HDMI input (for a DVI input, use an HDMI-to-DVI adapter.)

The **HCNA** (HomePNA over Coax) is the technology, which allows to utilize existing coaxial cable as the network's physical wiring to connect PCs and Ethernet enabled devices, such as STB, to a LAN, thereby eliminating the need to install new wiring.

The **Ethernet Port** is a RJ-45 port for IP video output.

The **Pr, Pb, & Y** are for RCA component video outputs to an HDTV.

The **S-Video** (Super Video or Separated Video) is for a high quality video output to a VCR or TV that accepts S-Video. It carries video *only*, you must also connect to the TV or home theater receiver for audio.

The **Video Out** is for RCA video outputs to a TV, VCR, or other device.

The **Audio Out** are for left and right RCA stereo audio outputs.

The **To TV (Video Out)** is for coaxial output to connect the TV receiver to the TV or VCR.

The **USB** (Universal Serial Bus) is a USB 2.0 connector.

The **Power** is the connector for the DC power adapter.

Troubleshooting Guide

Here are some solutions to problems you may encounter. If you need further assistance, please contact Citizens at (715)237-2605 or Just Dial 611.

PROBLEM: *LED light on the remote blinks, but the component doesn't respond.*

POSSIBLE SOLUTIONS:

- (1) Try replacing the batteries. You will need two AAs.
- (2) The component may not be programmed into your remote. (See page 5 for set-up)
- (3) The component may not be selected. To do so, simply press the STB, TV, DVD, or AUX button.

PROBLEM: *No Power.*

POSSIBLE SOLUTIONS:

The Power cord may be disconnected. Make sure that the Set Top Box is plugged into a live electrical outlet.

PROBLEM: *No Sound.*

POSSIBLE SOLUTIONS:

The Mute button may have been pressed on the Remote Control. Press the Mute button to restore the sound and volume.

PROBLEM: *No Picture.*

POSSIBLE SOLUTIONS:

- (1) Check all cables.
- (2) If your TV is hooked up to coax cable, the TV may be on the wrong channel. Try going to Channel 3 or 4.

PROBLEM: *No Picture or Sound.*

POSSIBLE SOLUTIONS:

- (1) The signal may not be reaching your TV. Make sure all the cables are connected properly on the back of your Set Top Box and your TV.
- (2) Make sure your Set Top Box is turned on and displays a green light.
- (3) The TV may not be on the right channel to display input. Using the Remote Control for the TV **OR** if your TV has been programmed into the Set Top Box Remote Control, using the Remote Control for the Set Top Box, make sure the TV is on the correct channel.
- (4) After trying solutions 1 & 2 and still no picture, you will need to Reboot your system. To do this, unplug the Set Top Box and plug it back in. It will take up to 5 minutes for your system to restart.

PROBLEM: *Picture is distorted.*

POSSIBLE SOLUTIONS:

The TV cable may be disconnected or loose. Make sure the cable is tightened or reconnected.

PROBLEM: VCR will not record.

POSSIBLE SOLUTIONS:

- (1) The signal may not be reaching your TV. Make sure all the cables are connected properly on the back of your VCR and your TV.
- (2) The TV may not be on the right channel to display input. Make sure the TV is on the correct channel.
- (3) Make sure you are using the correct Remote Control.

PROBLEM: Parental Controls are not working.

POSSIBLE SOLUTIONS:

- (1) You will need to activate Parental Controls by pressing the Menu button
- (2) You need to make sure there is a checkmark next to Parental Controls in the Settings option.
- (3) You need to make sure that the Movie & TV Ratings are listed to your desired content.

PROBLEM: Can't adjust the recorded program that I am watching.

POSSIBLE SOLUTIONS:

- (1) You will need to use the VCR/DVD/PVR Controls on your Set Top Box Remote Control.
- (2) To stop the program, press the Stop button instead of the Exit button.

PROBLEM: Can't get the Menu, Guide, or Info button to work.

POSSIBLE SOLUTIONS:

Press the STB button located in the upper right hand corner of your Remote. Make sure that it lights up when pushed.

PROBLEM: TV says "No Signal" and it's on the right channel.

POSSIBLE SOLUTIONS:

Most likely the TV is on the wrong input. To correct this, do the following: With the TV and the settop box on, hit the TV button on your remote then the Input button on your remote. Keep pushing the Input button on your remote until it goes through all the options or until your picture comes back on. If the Input button does not do anything, you can change the input or source button on your TV by physically changing the channel using the up or down button on your TV box.

PROBLEM: Some channels are in Spanish and others don't have any sound at all.

POSSIBLE SOLUTIONS:

The language in the settop box has been set to Spanish. To correct this, do the following: Press the Menu button on your remote control; Select the Settings icon; Using the Directional Arrows, highlight Hardware Settings and press OK; Using the Directional Arrows, highlight Audio and press OK; Both the primary and secondary languages should say English, if both or either one do not say English, highlight primary and/or secondary language and press the Down arrow until English is in the field then press OK; Pressing the Red button on your remote control twice to get back to your program.

Troubleshooting Guide (continued)

PROBLEM: *Why doesn't my non-DVR Set Top Box show my DVR Recordings?*

POSSIBLE SOLUTIONS:

You will need to make sure you are signed up for Whole Home DVR Access. If you are simply unplug your DVR Set Top Box and plug it back in to reboot the system.

PROBLEM: *Why do I get the message "Video Channel is blocked" when I try to order a PPV movie?*

POSSIBLE SOLUTIONS:

- 1) Check your Parental Control settings to determine if the settings are blocking the movie.
- 2) Check your Channel Blocking settings to determine if the the channels are blocked.
- 3) The movie may already be playing. Some PPV movies won't let you order the show once it has begun.

Citizens Connected
328 W Main St
PO Box 127
New Auburn, WI 54757
Ph: (715)237-2605
Website: www.citizens-connected.com